



How to update main
controller software



How to update main controller software

1. Using USB connect main controller and PC, open GG-002 application program.
2. Copy HEX file supplied by ANC to hardware.
3. One hand hold 【0】 key, another hand turn power on. Then main controller LCD show that main controller is ready for update, count down 60 seconds. If normal, one interface window come out, points to HEX file needs to updated.
4. Click 【Program】 start update, wait until finish. After finished update, will automatically restart and into normal work status. Will keep all previous setup.

Please refer to 8.8 in GG-002 user manual.

How to update main controller software

ANC Auto Irrigation System

Network Setup Basic Setup Set Up Zones Registered Remote Control History Log

Irrigation Zone Info Pump And Valve Info Flow Info Pressure Info

Select zone: #1

Legend: Not reg Irrigating Other Alarm

Control mode:	Soil moisture control	Dry level:	1%	Current level:	99%	Wet level:	1%
Current status:	Remote On	Air temperature:	0°C				

Zone Sensor

No.	Signal	Electricity	Mo
1			9
2	--	--	
3	--	--	
4	--	--	

Program - ANC TECHNOLOGY

Input HEX file:

Path: D:\GG-002 WIFI 3G.hex

Browse

Program

Progress:

PH/EC Sensor

Signal:	--
Electricity:	--
PH:	--
EC:	--

•Last irrigation event: --:--:-- H_M

Soil Moisture History

X-Axis Scale: 100

Query mode

Automatic

After specified time

2015-07-27 15:45

Legend:

- Sensor #1
- Sensor #2
- Sensor #3
- Sensor #4
- Irrigation
- Wet level
- Current level
- Dry level

Ready

<http://www.ancotech.com/>

Version: 3.0.1

2015-07-27 Mon. 15:51:28

The end!

Thanks!