

How to register flow meter

ANC Technology

www.anctech.com

First, power on main controller and wireless flow meter controller

- Put main controller and field controller both at registration status to register, and establish bidirectional wireless communication between main controller and field controller.
- We first show how to put main controller into registration status, then field controller.

On main controller



Exit Enter

Push "Menu" key into system main menu










1. Push up/down key browse into Register/Remove menu

System Main Menu Register/Remove **Basic Setup Zones Setup** Wireless Devices Exit Enter Menu Remote Manual On/Off Zones History log Help Enter Exit multifunction key, refer to the move cursor cancel save data corresponding display in editing area /exit lenter.

2. Push "Enter" into this setup

2. Key in flow meter number, for example, here we key in 1

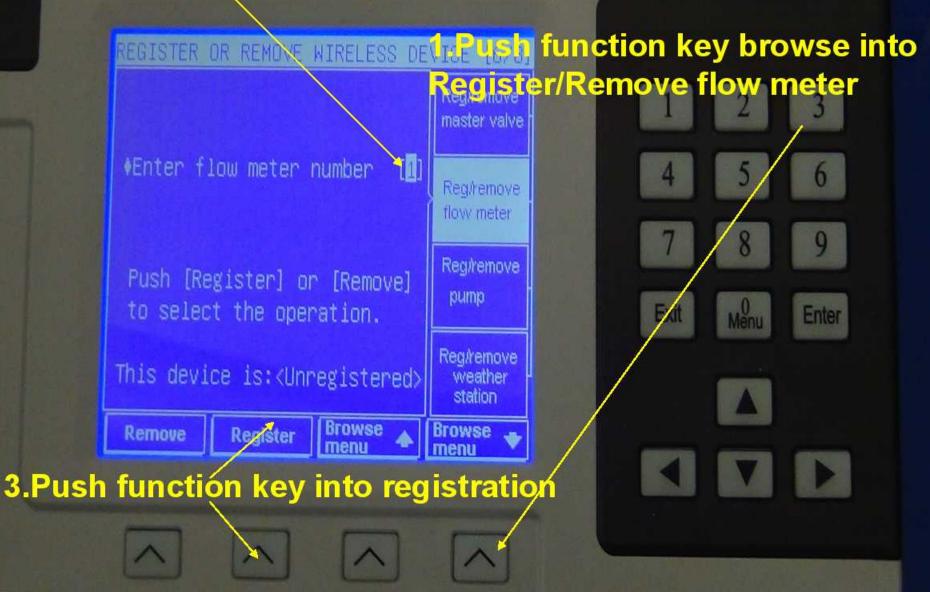

1.Main controller is searching for wireless field controller



2.Put main controller aside












On flow meter controller Auto off Auto off 0.00 m³/h 0.00 Mpa Push "Menu" key into main menu

On main menu page

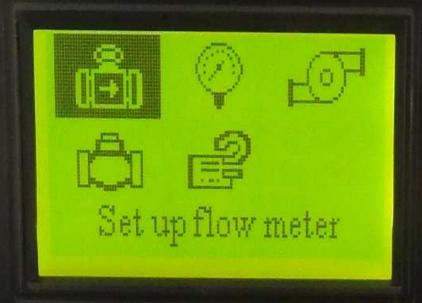

Push "Enter" key browse into "Set up flow meter"



Setup flow meter page

Set up flow meter

Reg/remove flowmeter

Flow meter coefficient

Set up flow rate range


Push "Enter" into "register/remove flow meter"



On register/Remove flow meter page



1. Push "Enter" key into registration

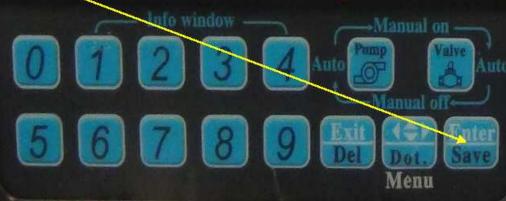


Two beeps mean successful registration

2.After successful registration, field controller will show as this.

Reg/remove flowmeter
System ID = 33
Device No. = 1
Register Remove


10 1 2 3 4 Manual on Manual of Control of

1. After successful registration, main controller will show as this.

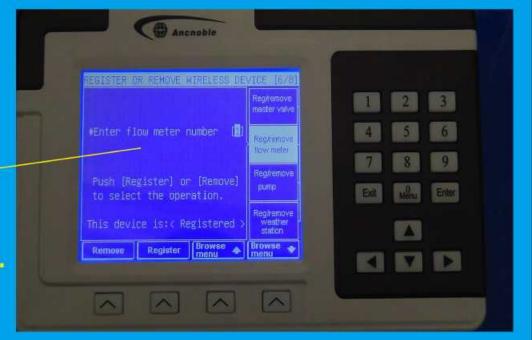

On main controller

Push function key twice to check flow meter information

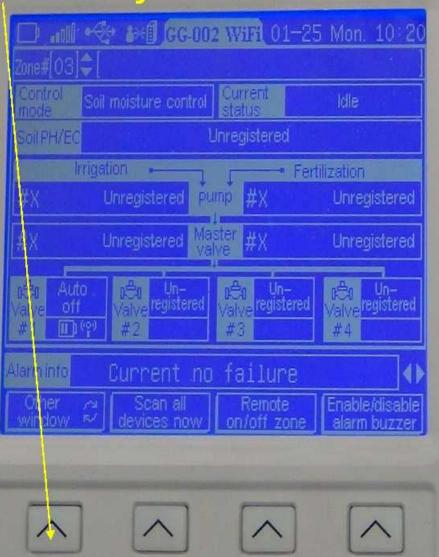

Ancnoble





Flow meter information on main controller

	ull «	8 8-¶ G	G-002 W		5 Mon. 15:32	
L	# Status Cur [Mpa] Range [Mpa] Unregistered					
ietei 2	Unregistered Unregistered Unregistered Unregistered Unregistered Unregistered Unregistered					
0 3						
ns 4						
# 5	Unregistered					
#	Status	Cur[m3/h]	Range	[m ³ /h]	Total [m³]	
SE 1	(P)	0.00	0.20-	0.40	0.20	
<u>ģ</u> 2	Unregistered					
Me 3	Unregistered					
Flow Meter Info	Unregistered					
<u> </u>	5 Unregistered					
1000	her 🔥	The second second	THE RESIDENCE OF THE PARTY OF T	Flow rate history	Set up range	











Notice:

- 1. Needs to register all the devices one by one. 2. For example:
 - 1) If you using flow meter and pump both, needs to register flow meter and pump one by one. No matter if they controlled by one controller or by several controllers.
 - 2) If using two pumps, needs to register as #1 and #2 pumps.



The end Thanks

ANC Technology www.anctech.com